



# QUICK START GUIDE

## 2025 DIGITAL DISPLAYS

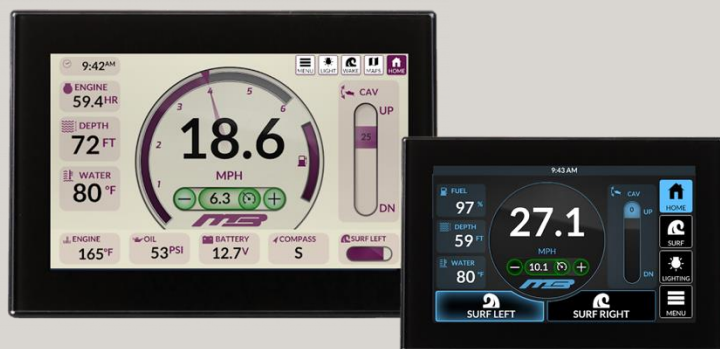

### 5" HOME SCREEN OVERVIEW

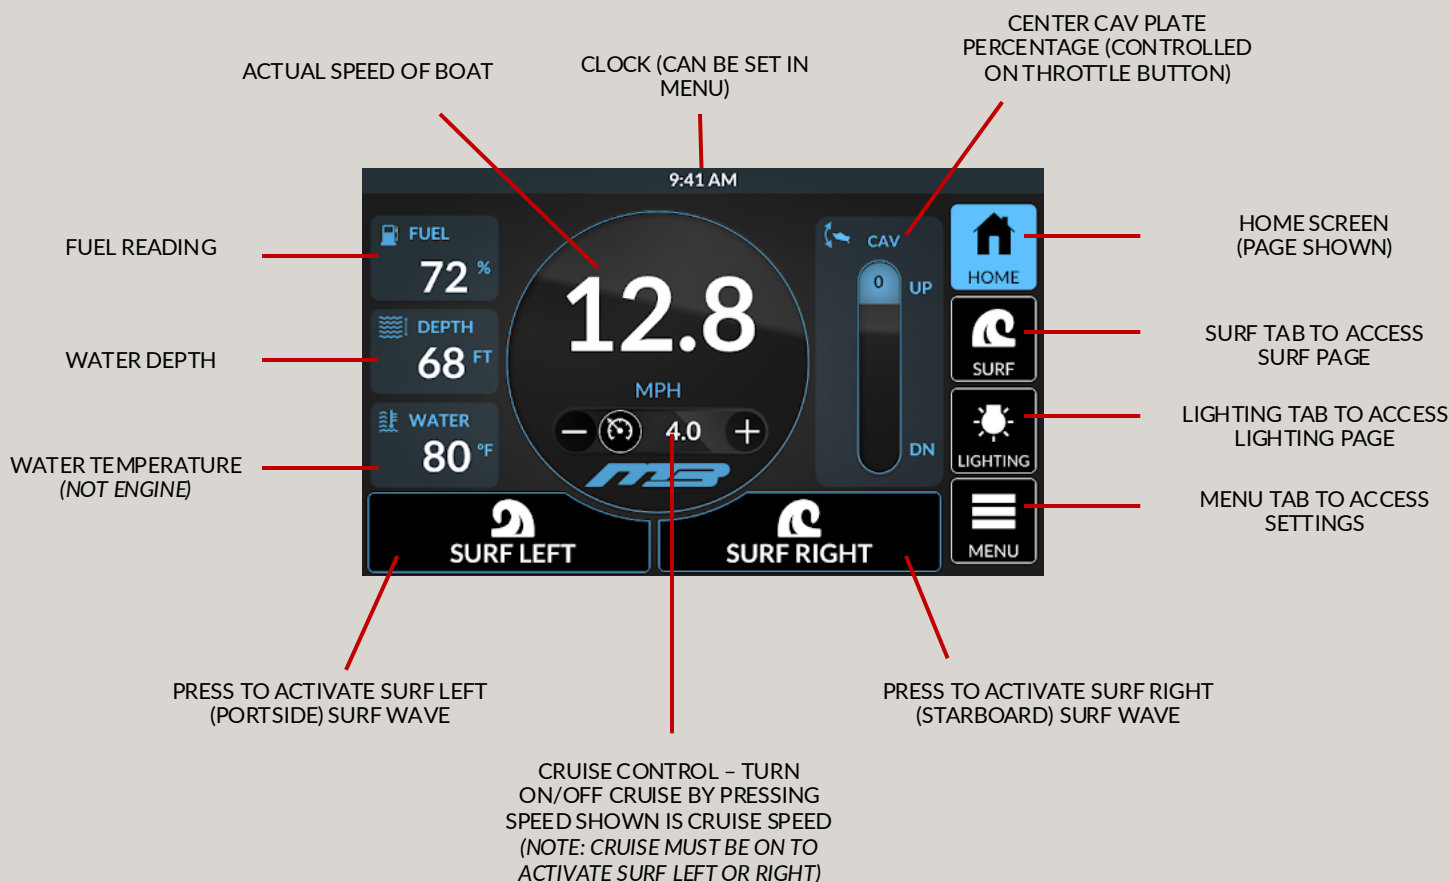


### IMPORTANT NOTE!



CRUISE MUST BE ACTIVATED (ON) TO ENABLE THE SURF LEFT OR SURF RIGHT FUNCTION. CRUISE CAN BE TURNED ON AND OFF BY PRESSING THE CRUISE ICON ON THE 5" SCREEN, THE 7" SCREEN, OR THE PHYSICAL CRUISE ON/OFF BUTTON ON THE DASH.

# QUICK START GUIDE

## 2025 DIGITAL DISPLAYS

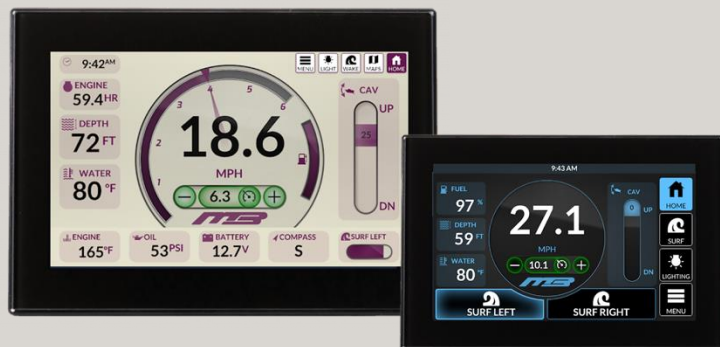

### 7" HOME SCREEN OVERVIEW

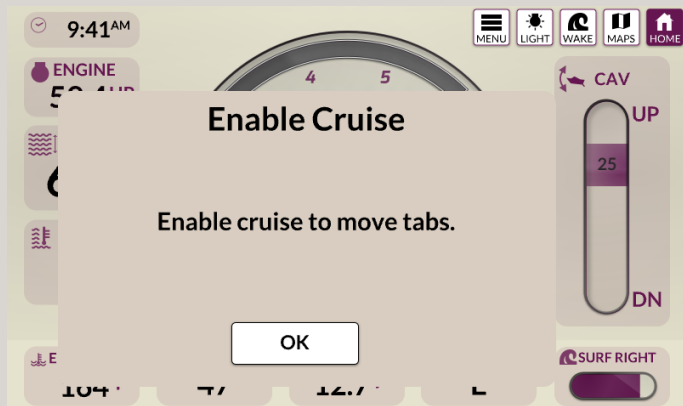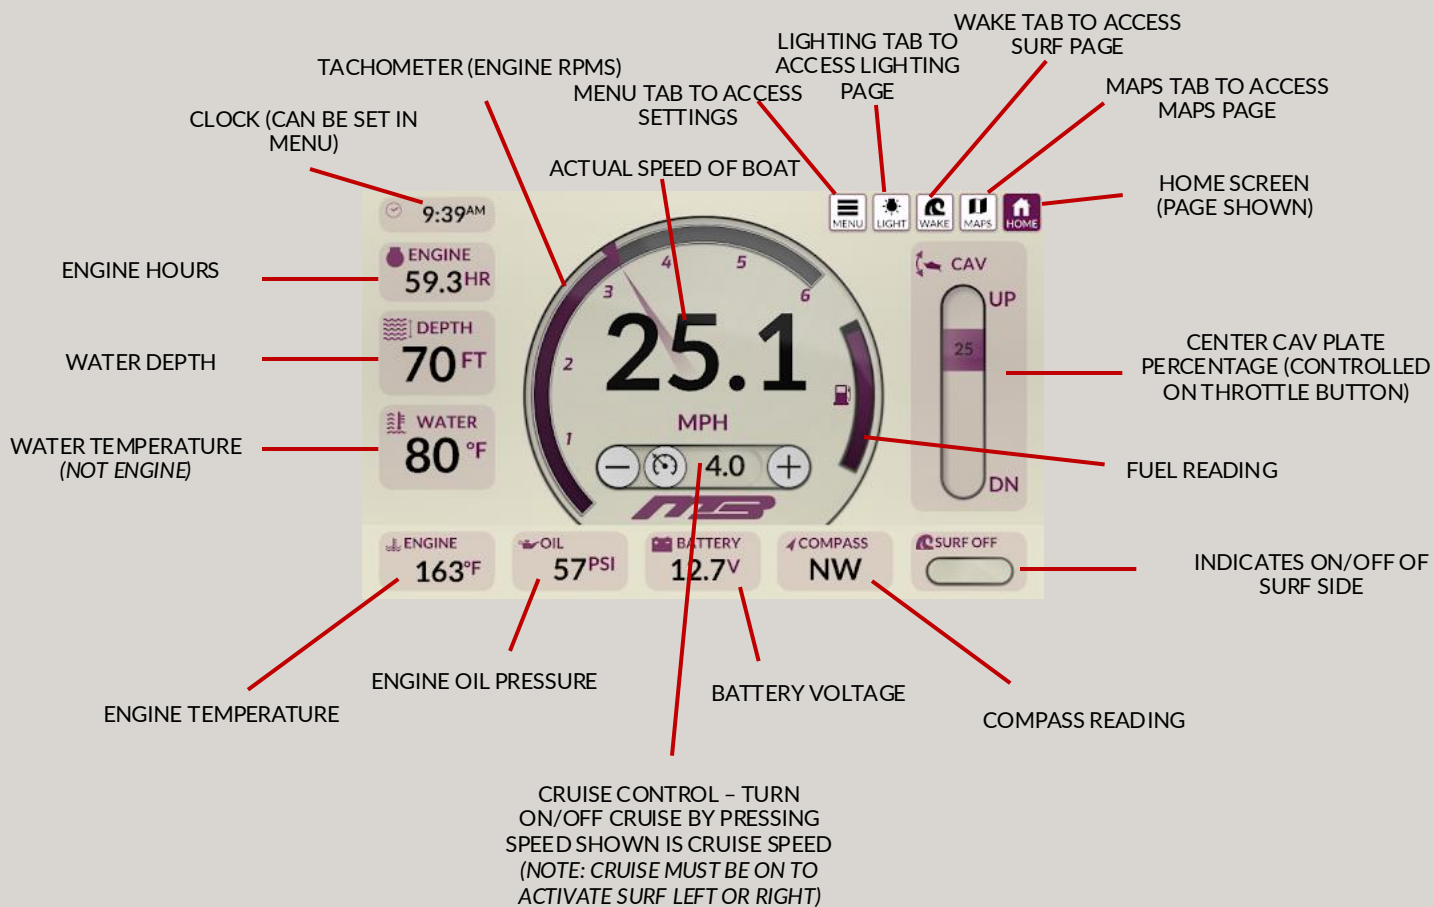

### IMPORTANT NOTE!


CRUISE MUST BE ACTIVATED (ON) TO ENABLE THE SURF LEFT OR SURF RIGHT FUNCTION. CRUISE CAN BE TURNED ON AND OFF BY PRESSING THE CRUISE ICON ON THE 5" SCREEN, THE 5" SCREEN, OR THE PHYSICAL CRUISE ON/OFF BUTTON ON THE DASH.



| THE ART OF BOAT MAKING

# QUICK START GUIDE

## 2025 DIGITAL DISPLAYS

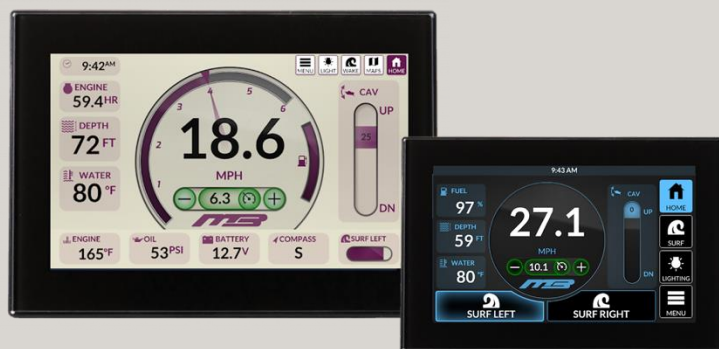

### SURF PAGE 5" SCREEN

1


PORT & STARBOARD (STDB) BALLAST INDICATORS SHOW ONLY THE LEVELS OF THE SUBFLOOR BALLAST (HARD TANKS). THE BOW INDICATOR SHOWS THE LEVEL OF THE BOW BAG.

2

FILL THE PORT & STARBOARD SUBFLOOR BALLAST FIRST BY OPENING THE GRAVITY FED BALLAST LEVERS ON THE ARMREST. ONCE THE LEVELS FILL ATLEAST 80%+ ON THE INDICATORS CLOSE THE GRAVITY FED BALLAST LEVERS. NOW PUSH THE PLUS ICON ON EACH PORT AND STARBOARD INDICATOR TO SET THE PUMP TIME. TIMER IS SET AT 1:30 SECOND INCREMENTS. WE RECOMMEND FILLING UNTIL FULL AND WATER IS COMING OUT OF THE PLUG-N-PLAY BAG OVERFLOW PORTS.

3

THE BOW BAG (IF MODEL EQUIPPED) CAN BE FILLED AND DRAINED BY PUSHING THE PLUS OR MINUS ICON.

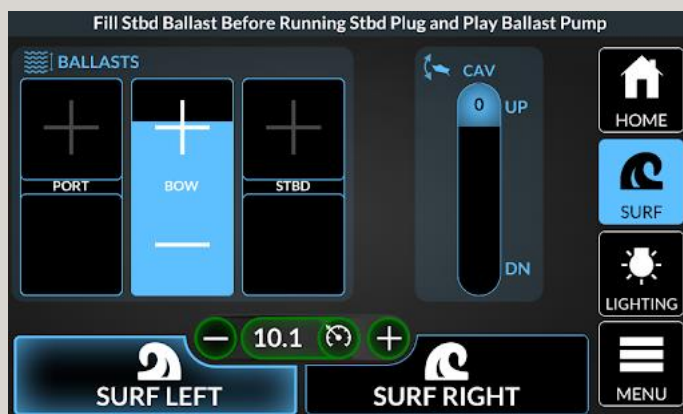

#### DRAINING THE BALLAST


TO DRAIN PLUG-N-PLAY & HARD TANKS OPEN THE GRAVITY FED BALLAST LEVERS ON THE ARMREST, PRESS THE MINUS ICON ON THE BOW BAG AND DRIVE THE BOAT AT 12-18MPH UNTIL THE BOW, PORT, AND STBD LEVELS SHOW EMPTY. CLOSE THE BALLAST LEVERS ON THE ARMREST AND PRESS THE MINUS ICON ON THE BOW BAG TO TURN OFF THE REVERSIBLE BOW BAG PUMP.

### WAKE PAGE 7" SCREEN

THE WAKE PAGE ON THE 7" SCREEN DOES NOT CONTROL BALLAST PUMPS OR CONTROL THE SURF TABS. IT IS FOR REFERENCE OF THE SURF SYSTEM AND BALLAST LEVELS ONLY. CRUISE CAN BE ACTIVATED AND CRUISE SPEED SET ON THIS SCREEN.

#### WAVE TIPS!


WE RECOMMEND FILLING ALL BALLAST AS A STARTING POINT. TO HELP CLEAN UP OR SET UP A WAVE PER RIDER PREFERENCE, WATER CAN BE LET OUT ON THE OPPOSITE SIDE OF THE RIDER'S WAVE BY OPENING THE GRAVITY FED BALLAST LEVERS WHILE UNDERWAY IN 5 SECOND INCREMENTS. FOR SURF LEFT WAVE WE RECOMMEND TRYING 20-35% CAV PLATE DOWN TO HELP CLEAN THE WAVE AND GENERATE A LONGER WAVE.

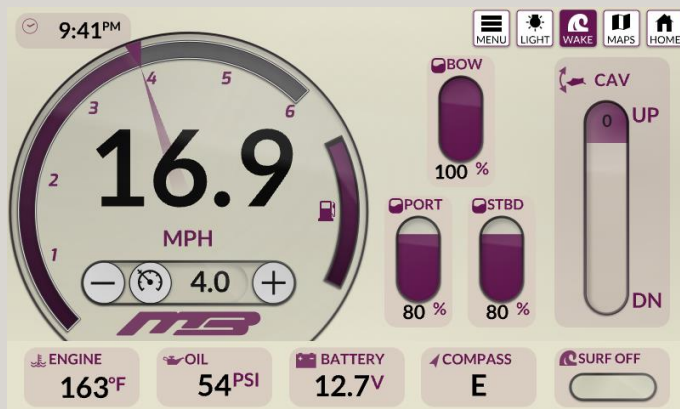

| THE ART OF BOAT MAKING

# QUICK START GUIDE

## 2025 DIGITAL DISPLAYS

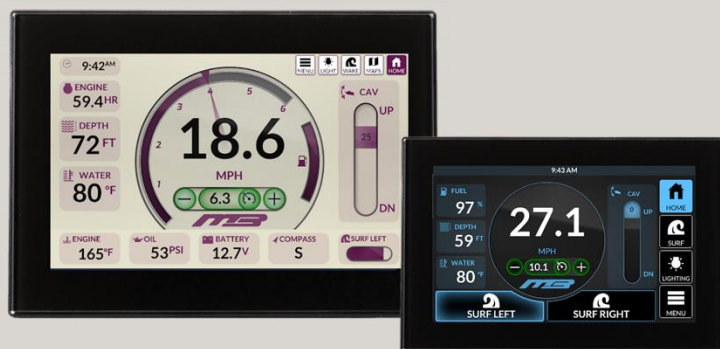

### LIGHTING PAGE 5" SCREEN

1

#### SURF LIGHTS (OPTIONAL)

IF YOUR BOAT IS EQUIPPED WITH SURF LIGHTS PRESSING THIS BUTTON WILL TURN ON AND OFF THE SURF LIGHTS. FOR RGB SURF LIGHTS HOLD THE BUTTON FOR 3 SECONDS AND THEN CHOOSE A COLOR FROM THE COLOR WHEEL.

2


#### NAVIGATIONAL & ANCHOR LIGHTS

ALL MODELS COME STANDARD WITH NAVIGATION AND ANCHOR LIGHTS. PRESS THE BUTTON ONCE TO TURN ON THE NAVIGATION LIGHTS, ONCE MORE TO TURN ON THE ANCHOR LIGHT. A NOTICE BAR WHERE THE CLOCK IS LOCATED WILL DISPLAY ON & OFF STATUS OF THE LIGHTS.

3

#### COURTESY LIGHTS

ALL MODELS COME STANDARD WITH RGB COURTESY LIGHTS (INTERIOR). PRESS THIS BUTTON TO TURN ON OR OFF THE LIGHTS. HOLD THIS BUTTON FOR 3 SECONDS AND THEN CHOOSE A COLOR FROM THE COLOR WHEEL TO CHANGE COLORS.

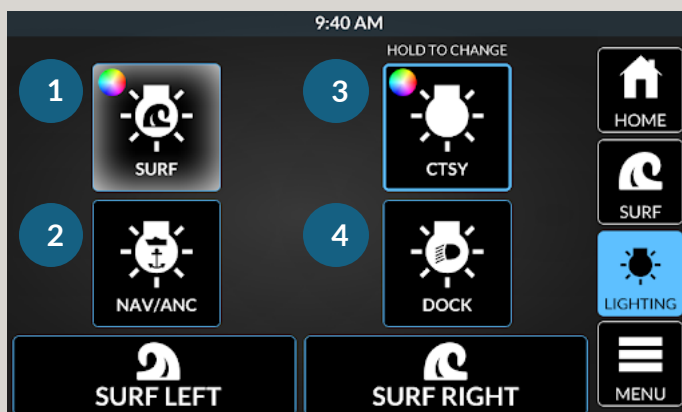

4


#### DOCKING LIGHTS (OPTIONAL)

IF YOUR BOAT IS EQUIPPED WITH DOCKING LIGHTS PRESSING THIS BUTTON WILL TURN THEM ON AND OFF.

### LIGHTING PAGE 7" SCREEN

#### LIGHTING PAGE FOR 7" SCREEN


THE LIGHTING PAGE ON THE 7" SCREEN CONTROLS LIGHTING THE SAME WAY AS THE 5" SCREEN. YOU CAN USE EITHER SCREEN TO ACTIVATE OR DEACTIVATE LIGHTS. RGB COLORS CAN ONLY BE CHANGED USING THE 5" SCREEN. AFTERMARKET LIGHTING PACKAGES MAY SHOW AN ADDITIONAL ACCENT LIGHTING BUTTON OR THEY ARE CONTROLLED THROUGH A SEPARATE CONTROLLER.

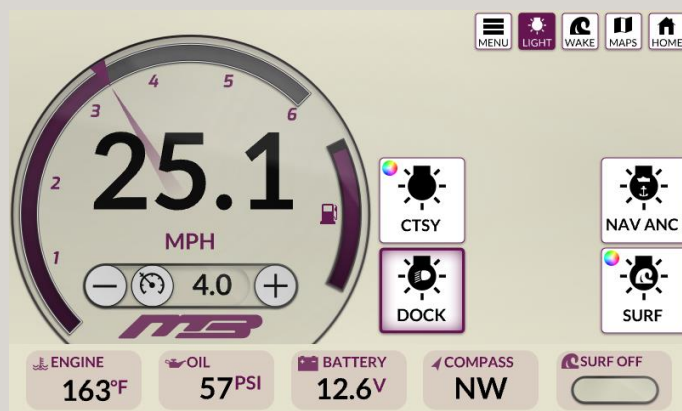

| THE ART OF BOAT MAKING

# QUICK START GUIDE

## 2025 DIGITAL DISPLAYS

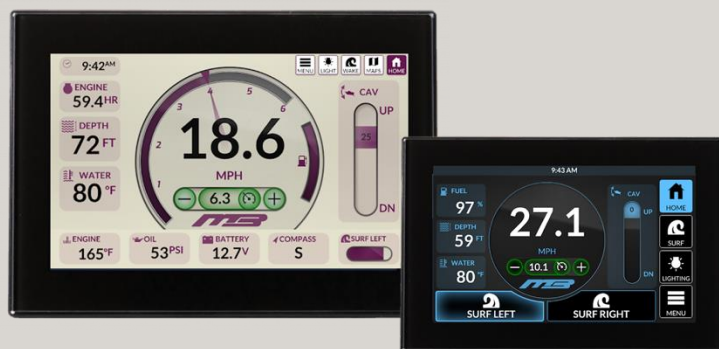

### M E N U   P A G E   5 "   S C R E E N

#### GENERAL


BY SELECTING GENERAL YOU WILL ACCESS THE GENERAL SETTINGS PAGE WHICH HAS:

- CLOCK SETTINGS
- SOFTWARE VERSION DISPLAY
- UPDATE SOFTWARE (THIS IS AN ADVANCED FEATURE)
- REBOOT TO LOADER (THIS IS AN ADVANCED FEATURE)
- OWNER'S MANUAL QR CODE
- RESTRICTED SETTINGS

#### DISPLAY

BY SELECTING DISPLAY SETTINGS YOU WILL ACCESS:

- BRIGHTNESS +/-
- THEME COLOR (TO CHANGE ACCENT COLOR ON DISPLAY)
- BACKGROUND COLOR (TO CHANGE THE BACKGROUND SCREEN GRADIENT)

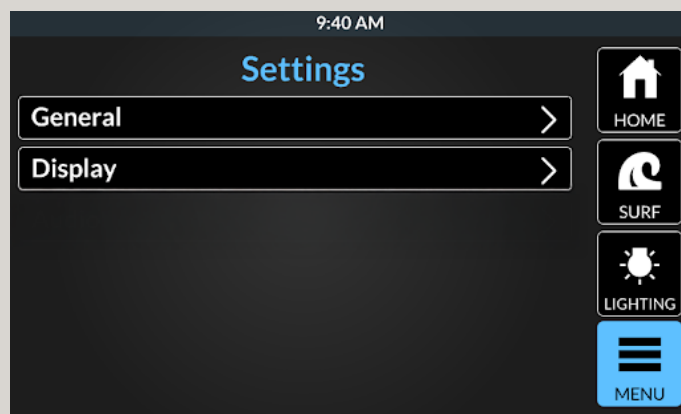

### M E N U   P A G E   7 "   S C R E E N

#### GENERAL


BY SELECTING GENERAL YOU WILL ACCESS THE GENERAL SETTINGS PAGE WHICH HAS:

- SOFTWARE VERSION DISPLAY
- UPDATE SOFTWARE (THIS IS AN ADVANCED FEATURE)
- REBOOT TO LOADER (THIS IS AN ADVANCED FEATURE)
- OWNER'S MANUAL QR CODE
- RESTRICTED SETTINGS

#### DISPLAY

BY SELECTING DISPLAY SETTINGS YOU WILL ACCESS:

- THEME COLOR (TO CHANGE ACCENT COLOR ON DISPLAY)
- BACKGROUND COLOR (TO CHANGE THE BACKGROUND SCREEN GRADIENT)

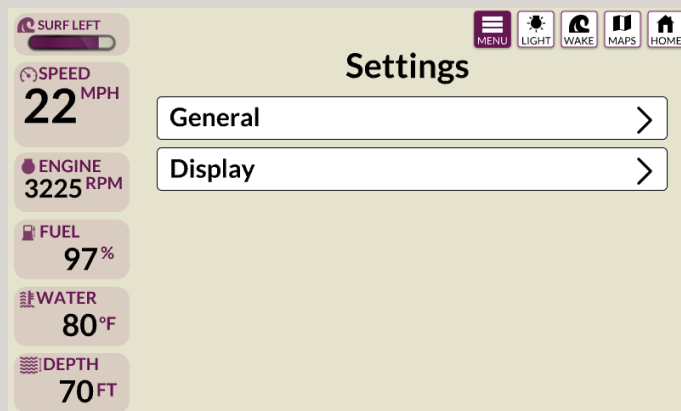

#### THEME COLOR TIP!

SET THE ACCENT COLOR YOU WANT ON THE 5" SCREEN  
AND THEN CHOOSE "THEME COLOR FROM MAIN DISPLAY"  
ON THE 7" THEME COLOR PAGE.



| T H E   A R T   O F   B O A T   M A K I N G